

# Quadra<sup>TM</sup>

## MAGNIFIER



The Quadra magnifier has an extra wide rectangular glass lens with 3 dioptres (1.75X) magnification providing a superb panoramic view. High power LEDs on both sides of the lens give shadow-free magnification. Each side can be independently switched on or off to give 3 dimensional viewing. Its heavy-duty arm with internal springs allows accurate and consistent positioning. An auto switch-off function saves energy.

---

LED 6,000°K daylight

---

---

5,000 Lux at 15 cm (6")

---

---

4 brightness levels

---



LIGHT QUALITY



ERGONOMICS




DESIGN

[daylightcompany.com](http://daylightcompany.com)

# Quadra<sup>TM</sup>

## MAGNIFIER

D25120

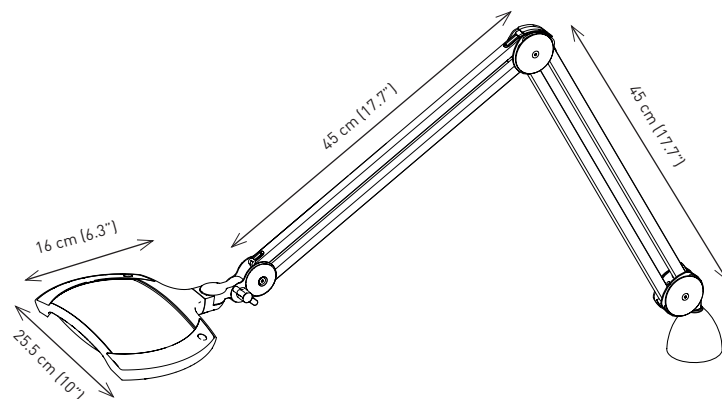

## FEATURES

- Glass lens
- Independent right and left switches
- Auto-switch after 9 hours
- 3 dioptries (1.75X)
- Adjustable head joint with wing nut
- Long reach 118 cm (46.5")

## SPECIFICATIONS

### Product information

Weight	4.2 kg (9.2lb)
Colour	White/grey
Cable length	2.5m (98")

### Light output

Light source	LED
Lumens	615 lm
Lux at 15 cm (6")	5,000
Colour temperature	6,000°K
CRI	80+
Energy consumption	10W

### Packaging information

Height	62 cm (24.4")
Width	52 cm (20.4")
Depth	10 cm (4")
Packed weight	5.4kg (11.9lb)
Products per master carton	2

## ACCESSORIES

### D62003 Xtra-Lens 4D&6D

Pack of 2 additional suction lenses with 4 dioptries (2.0X) and 6 dioptries (2.5X)



### D62002 Xtra lens 12D

12 dioptries (4.0X) mounted on a swing arm



### D53060 Floorstand

Height	72 cm (28.3")
Width	66 cm (25.9")
Weight	8.1kg (17.8lb)

