



INSPEX HD VESA

HIGH-DEFINITION
DIGITAL MICROSCOPE



INSPEX HD VESA

HIGH-DEFINITION DIGITAL MICROSCOPE



Experience full HD image quality with no delay. The ideal solution for those wishing to digitise and simplify their inspection process.

Ergonomically designed, allowing for less operator fatigue and improved production efficiency.

Simple, fast, high-quality inspection. Ideal for repair, rework, assembly and quality control in any manufacturing industry.

FEATURES & BENEFITS

Instantly transform your production process with Inspex HD Vesa

Multiple Configurations

Inspex HD is available in several different configurations to meet your needs.

Short, long or flexible, the ultra-versatile Vesa can be tailored to meet your needs.

Superb Image Quality

Accurate and detailed inspection with superb HD image resolution, colour reproduction, contrast and resolution and integrated LED illumination.

Zero Video Latency

Real-time movement under Inspex HD, resulting in a more efficient inspection process.

View parts in real time with no video lag, allowing you to comfortably inspect, rework, modify or assemble anything.



FEATURES & BENEFITS

Instantly transform your production process with Inspex HD Vesa

Image Capture

Easy documentation and traceability for accurate quality control records. Store images directly to USB. Simply plug and go!

Working Distance

SLWD (Super Long Working Distance) objective lens for extra-large part viewing.

Wide Dynamic Range

View dark and bright areas simultaneously without saturation. Wide Dynamic Range uses overlapping multiple exposures depending on the saturation level of each pixel.

On Screen Dimensioning

Integrated, real time, on screen patented measuring grids and cursors provide a simple and effective way to measure without a PC.



Included
System
Components



LENSES


+5 Lens



OTHERS

Memory Stick, HDMI Cable

Technical
Specifications

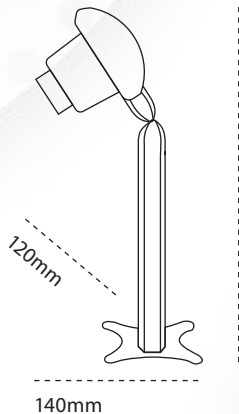

Magnification

Lens (Dioptre) (mm)	2	3	4	5	10
Max Height (mm)	500	333	250	200	100
Min Height	405	280	205	170	85
Minimum Magnification*	1.1	1.3	2	2.5	4
Maximum Magnification* Optical/ Digital	29/57	36/71	50/98	62/122	121/237
Field of view at minimum mag. (mm)	X: 595 Y: 334	X: 400 Y: 225	X: 280 Y: 164	X: 231 Y: 136	X: 60 Y: 50
Field of view at maximum mag. (mm)	X: 20/10 Y: 11/5.5	X: 14/7 Y: 8/4	X: 10/5 Y: 6/3	X: 8/4 Y: 5/2	X: 5/2 Y: 3/1
Maximum depth of field	176	120	106	78	57
Minimum depth of field	5	4	1	.50	.20

Technical Specifications

	Vesa
Zoom Range (with supplied Lens)	5D Lens – 2.5x - 122x
Camera Resolution	HD 1080p, 1920 x 1080 at 50/60 Hz
Monitor Connections	HDMI / DVI
Monitor Requirements	HD Ready / Full HD (Recommended)
Power	8 Watts
Dimensions	370mm x 120mm x 140mm
Weight	1.2kg
Operating Temperature	Storage -10°C to +60°C Operating +5°C to +40°C
Image capture	USB 2.0 highspeed

Optional System Components



LENSES

+3 Lens

AI 280-129

+4 Lens

AI 280-125

+5 Lens

AI 280-123

+10 Lens

AI 280-124

Lens Polarizing Filter

AI 280-145

Lens Protector

AI 100-061



LIGHTS

8-Point LED Ring Light

AI 100-012

Polarizer for 8-Point LED Ring Light

AI 100-000

Diffused LED Dome Light

AI 100-001

LED Fibre Optic Illuminator with Dual Gooseneck

AI 100-033

UV Ring Light

AI 100-026 220V 254nm

AI 100-005 220V 375nm

AI 100-035 110V 254nm

AI 100-034 110V 375nm



CONTROLLERS

KP1 External Keypad

AI 801-414

Required to activate dimensioning grids

Footswitch

AI 801-415



OTHERS

Ash PC Capture

AI 100-052

24" Monitor

AI 801-416

Hard Case

AI 801-561

Soft Case

AI 801-566



STANDS & STAGES

XY Stage

AI 100-010

Track Stand Vesa Flex Cam

AI 100-028

Track Stand Vesa & Vesa Short Flex Cam

AI 100-019

Track Stand Vesa Short

AI 100-020

XY Stage for Uplight

AI 100-011

Uplight Track Stand Vesa & Vesa Short Flex Cam

AI 100-023

Oblique Tilting Stage

AI 801-414

Height Adjustable Stage

AI 801-413

XY Stage Large

AI 100-057



ASH HQ - Ireland
B5, M7 Business Park,
Naas, Co. Kildare
W91 P684
+353 (0) 45 88 22 12

sales@ashvision.com
www.ashvision.com



red dot award
product design
winner



Distributor

PeplerOptics

Booths Park, Chelford Rd, Knutsford, Cheshire, WA16 8GS

www.pepleroptics.com Tel: +44 (0)1625 541336

Images, descriptions and technical data subject to change. Ash reserve the right to make changes without notice.



Printed on recycled paper